

PERRAULT

SCULPTURE IN COPPER AND STONE

CONTENTS FOR STUD MOUNT (PREFERRED METHOD)



5/32" DRILL BIT



HANGER BOLT
INSTALLATION TOOL



COPPER STAND OFF WITH
INTERNAL CAPTURED NUT




HANGER BOLT



COPPER WASHER

DIAGRAM OF COMPLETED ASSEMBLY FOR STUD MOUNT

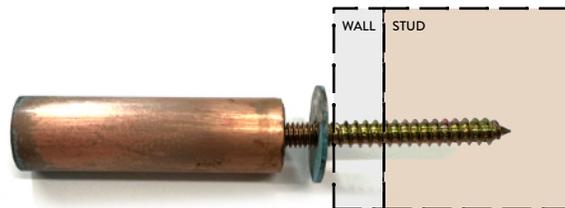

STUD MOUNT INSTRUCTIONS:

READ COMPLETELY AND MAKE SURE YOU UNDERSTAND ALL STEPS BEFORE BEGINNING

1. Drill 5/32" pilot hole into wall and stud with supplied drill bit.
2. Thread the hanger bolt installation tool onto the hanger bolt
3. Use a drill/driver to screw the hanger bolt into the wall and stud, trying to drill as straight as possible. Continue until only 1-1/2" of the hanger bolt sticks out of the wall.
4. Unscrew the hanger bolt installation tool, leaving only the hanger bolt sticking out of the wall.
5. Insert large copper washer on the hanger bolt.
6. Thread the small section of copper stand off onto the hanger bolt with the internal captured nut closest to the wall. Tighten very tight. The washer should begin to indent into the wall. When done correctly the copper pipe should not wiggle AT ALL. It will feel very sturdy.
7. Align the mounting hole on the back of the sculpture and press the stone onto the section of copper pipe. You can slightly rock the stone left to right to make sure it is fully seated.

Congratulations, you did it!

Be very mindful not to touch the figures, they are extremely fragile!!!

PERRAULT

SCULPTURE IN COPPER AND STONE

CONTENTS FOR DRYWALL MOUNT


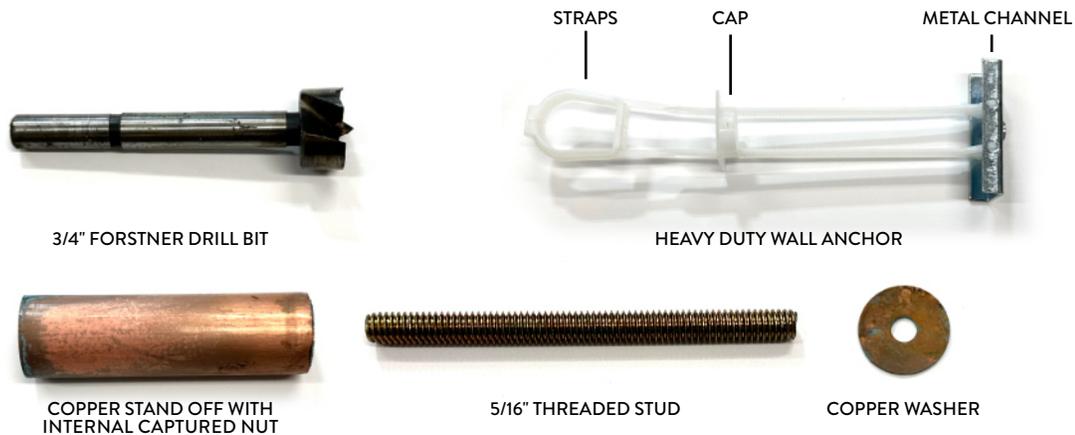


DIAGRAM OF COMPLETED ASSEMBLY FOR DRYWALL MOUNT

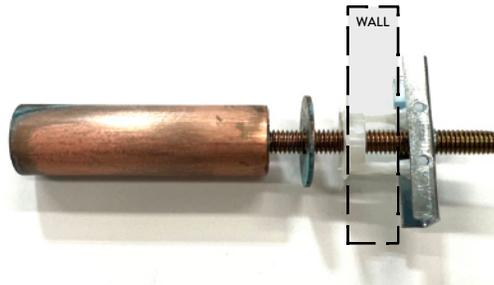


DRYWALL MOUNT INSTRUCTIONS:

READ COMPLETELY AND MAKE SURE YOU UNDERSTAND ALL STEPS BEFORE BEGINNING

1. Drill 3/4" hole with provided forstner bit, drilling into the wall as straight as possible.

2. Hold the metal channel flat alongside plastic straps & slide channel through the hole. Position the metal channel vertically as opposed to horizontally (fig. A)

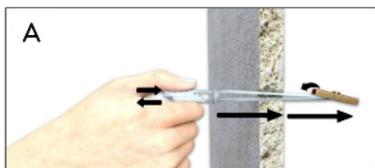


3. Hold ends of straps together between thumb & forefinger and pull toward you until channel rests behind wall. (fig. B)



4. Ratchet the cap along straps with other hand until flange of cap is flush with wall. (fig. C)



5. Place thumb between straps at wall. Move the straps up and down repeatedly, snapping off straps level with flange of cap. (fig. D)

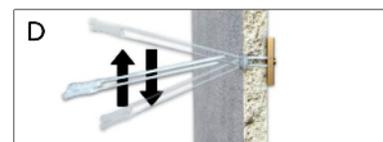

6. Insert the 5/16" threaded stud through the cap and thread it into the anchor until only 1-1/2" of the stud sticks out of the wall.

7. Insert large copper washer on the threaded stud.

8. Thread the small section of copper stand off onto the threaded stud with the internal captured nut closest to the wall. Tighten very tight. The washer should begin to indent into the wall. When done correctly the copper pipe should not wiggle AT ALL. It will feel very sturdy.

9. Align the mounting hole on the back of the sculpture and press the stone onto the section of copper pipe. You can slightly rock the stone left to right to make sure it is fully seated.

Congratulations, you did it!

Be very mindful not to touch the figures, they are extremely fragile!!!